

Reset Pressure Relief Valve

- 1/ Undo Locking Nut
- 2/ Hex Key - Turn clockwise until stops
- 3/ Turn Hex Key Anticlockwise 1/2 turn
- 4/ Tighten Locking Nut without rotating Hex bolt .



Pressure Relief Switch